

The pool vacuum does not lift the walls.

Sarah Tichler - 2019-04-04 - 0 Comments - in Poolroboter

Clean the filter container / filter bag.

Clean the pool walls of slippery deposits such as algae.

Enter the pool cleaner into the pool at optimal water temperature. This is between 10 ° C and 32 ° C.

Check the drive belts and brushes for wear and replace them if necessary.

Set the PH value correctly, it should be between 7.0-7.4.